



Button Pusher/Page Turner

A Button Pusher/Page Turner can provide an easy grip for someone with limited finger and hand control

Materials:

- 3/4" dowel purchased in a hobby, art, or hardware store
- unsharpened pencil with eraser
- Drill with drill bit 1/4" drill bit
- Saw

Directions for making button pusher/page turner:

1. Measure the dowel and mark in 5 1/2" sections
 2. Saw the dowel into sections.
 3. Drill a 1/4" hole in each section of dowel located at the midpoint and about 1/2" deep.
 4. Push the lead end of the pencil into the hole and glue if necessary.
 5. Repeat the process for each remaining dowel section.
-

Make-n-Take